

CABAA VISUAL DEPARTURE CHICAGO EXECUTIVE AIRPORT

CABAA Visual- Fort Sheridan Transition RWY 16

After take-off start assigned turn from Chicago Executive ATCT within 1 NM from the departure end of RWY 16 and remain outside Chicago Class B Airspace. Proceed to Fort Sheridan – VFR waypoint **VPFTS**. When instructed, contact Departure to activate your IFR clearance. Maintain VFR until advised by departure of activation of IFR clearance.

Climb and maintain VFR at or below 2000' or as assigned.

CABAA Visual- Bangs Lake Transition RWY 16

After take-off start assigned turn from Chicago Executive ATCT within 1 NM from the departure end of RWY 16 and remain outside of Chicago Class B Airspace. Proceed to Bangs Lake Wauconda – VFR waypoint **VPBNG**. When instructed, contact Departure to activate your IFR clearance. Maintain VFR until advised by Departure of activation of IFR clearance.

Climb and maintain VFR at or below 2400' or as assigned.


ALL AIRCRAFT REQUESTING THE “CABAA VISUAL DEPARTURE” MUST REMAIN CLEAR OF THE CLASS B AIRSPACE AT ALL TIMES.

CABAA VISUAL DEPARTURE CHICAGO EXECUTIVE AIRPORT (PWK)

PILOTS MUST SPECIFICALLY REQUEST THIS PROCEDURE USING THE ABOVE NAME

ALL AIRCRAFT

REQUESTING THE "CABAA VISUAL DEPARTURE" MUST MAINTAIN VFR
AND REMAIN CLEAR OF THE "CHICAGO CLASS B AIRSPACE" AT ALL TIMES

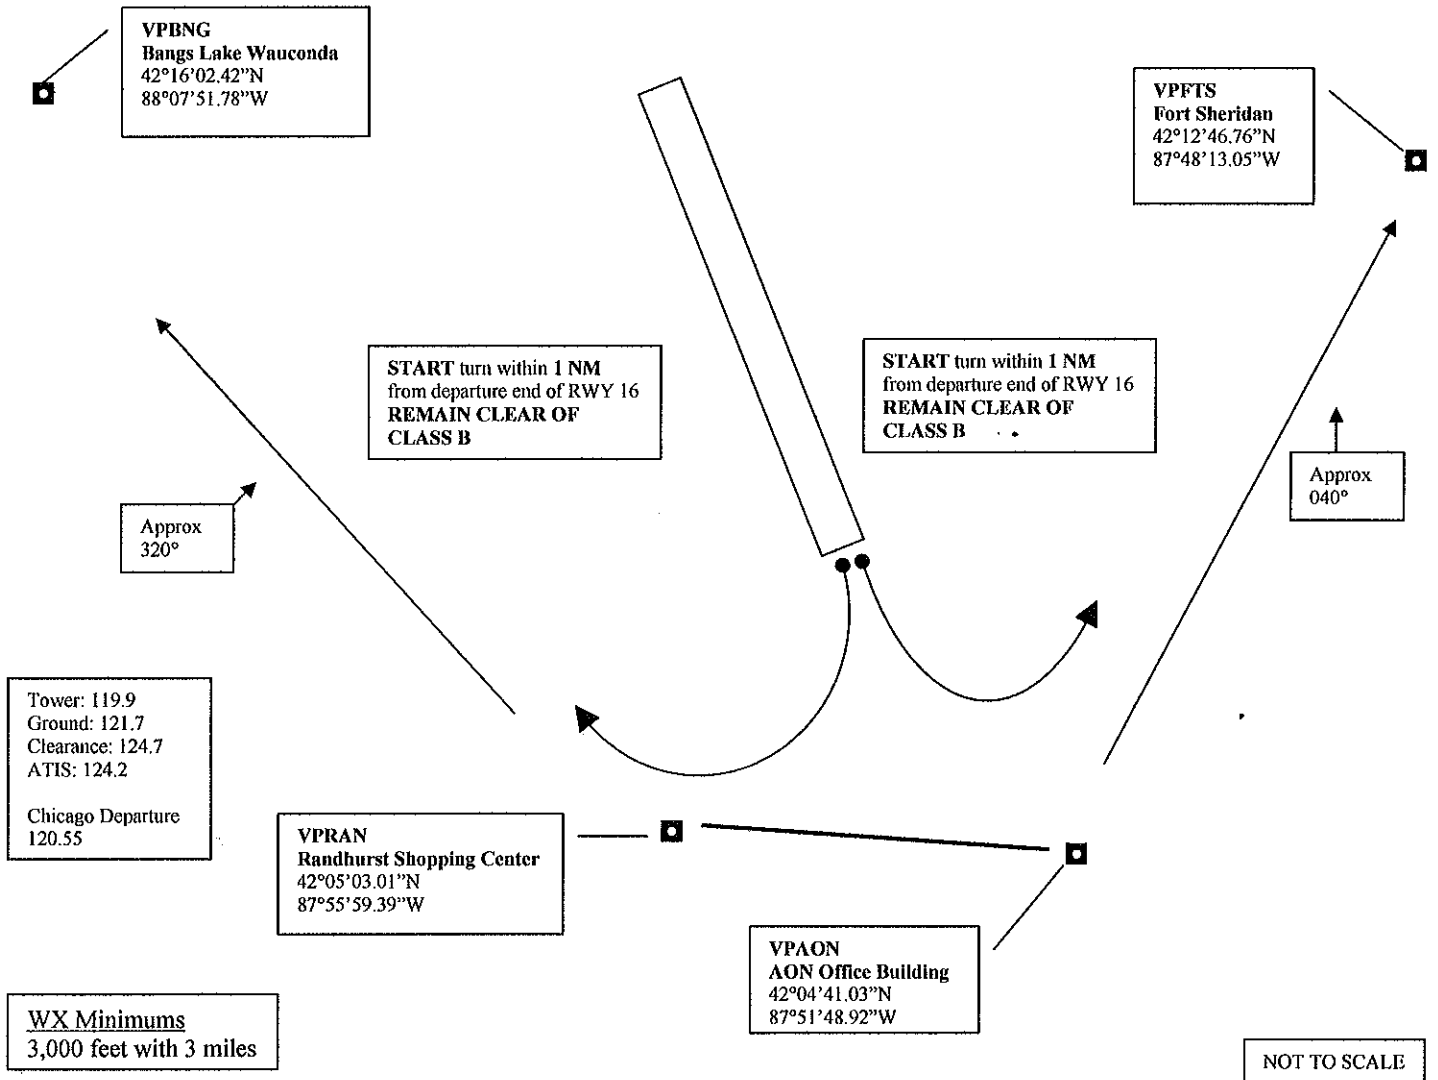

CABAA VISUAL to FORT SHERIDAN Transition RWY 16

After take-off proceed VFR to Fort Sheridan - VFR waypoint VPFTS. Maintain at or below 2000' or as assigned. Expect a climb clearance in vicinity of Fort Sheridan. ATC will advise activation of IFR Clearance.

CABAA VISUAL to BANGS LAKE Transition RWY 16

After take-off proceed VFR to Bangs Lake Wauconda - VFR waypoint VPBNG. Maintain at or below 2400' or as assigned. Expect a climb clearance in vicinity of Bangs Lake. ATC will advise activation of IFR Clearance.